




# Muffler instruction sheet

Yamaha Kodiak 400 **525**


---

## Instruction to follow:

1. Cut the original exhaust equal to the metal heat shield

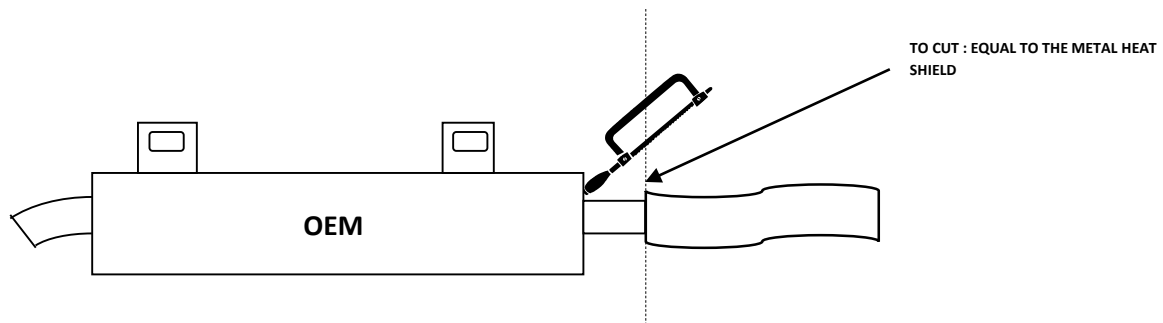

2. Clean the inflow pipe with sand paper

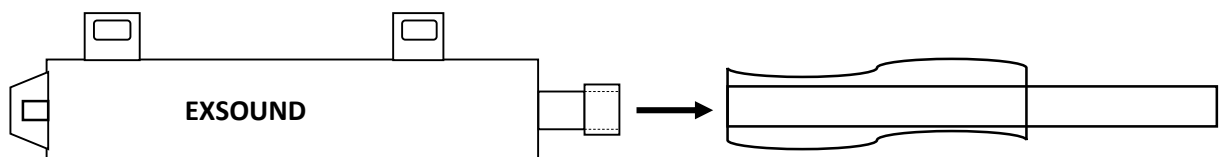

3. Insert the new Exhaust EXSOUND (BOLT-ON)

