## **INSTRUCTION SHEET**

MARQUE: CFMOTO

**MODEL:** CFORCE 600


#272

CYLINDER: 600 CC


**YEARS**: 2010-2013

**APPLICATION:** 



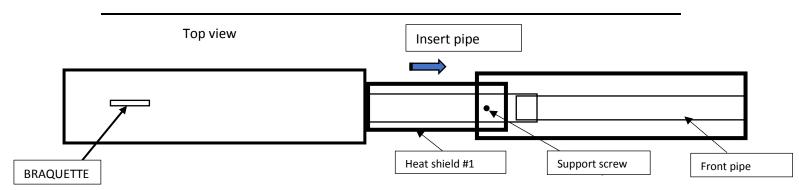


1. To fix the bracket on the ATV

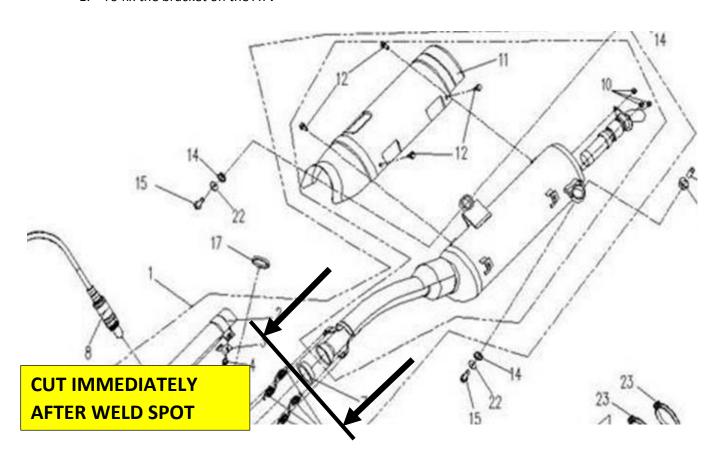

- 2. There is only one screw for all heat shield.
- 3. screw the retaining vis on the heat shield #2 . Let see picture below the heat shield #2 fit on the second heat shield.

The heat shield #2 is very important

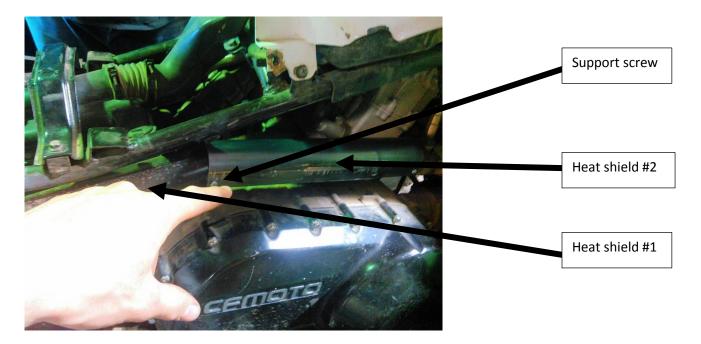

PARE CHALEUR #1